

Perrys No Peep Alignment Pin directions

US Patent 8,166,662

Perrys No Peep AP machined and assembled 6061 T6
7075 T6 aluminum, Delrin windage rod.

REMOVE PEEP SIGHT!

AP → alignment pin Your sight → target pins

Before installing AP on bow we must preset the top target pin to the alignment pin.
Temp install sight onto AP, hold out at full arm extension,

Line it up dot to dot (like the deer picture)
Now tweak the 20 yard pin vertically so at full arm extension dot to dot
The rear alignment pin and forward target pin sight rings are in line.

Mount Perrys No Peep AP to bow riser using your sight screws
Now install your sight to the AP with screws provided.

Note: now your sight top target pin is preset do not touch 20 yard pin allen bolt again
Adjustments of your top target pin will be done by moving the whole sight head.

Your aiming eye will not be looking through the center of the bowstring (peep sight)

Put the very tip of your nose on the center of the bow string
(Right hand example) your right eye is located right of your nose which will
Naturally put your aiming eye (right eye) just to the right of the bow string.

(IMPORTANT)

“SIGHTING IN PNP AP”

Note: to move alignment pin right or left loosen vertical tension bolt.

To move alignment pin head up or down loosen tension cap screw
located in center of windage rod 1/2 full turn.

Step #1

Loosen tension bolt, temporarily remove alignment pin sight ring / windage assembly.
We will not use the alignment pin in step 1. Tip of your nose on center of bow string, good shooting form, grip, feet position, anchor, etc.
Adjust the forward sight head n-s-e-w until grouping well at desired yardage, (20 yards) Top target pin only.

Step #2
(No arrows will be fired in step # 2)

Go to full draw with the same good form and make a visual note were the alignment pin is, now adjust the alignment pin n-s-e-w Until we see a side by side (dot-to-dot) view at full draw. At this point the Alignment pin and top target pin should “naturally” fall into place at full draw! Lock the windage and elevation down on the alignment pin sight head.

(We are done with AP alignment pin)

Step #3

Shoot your bow with the dot-to-dot view.
Now you will simply adjust the forward sight head to fine tune arrow impact.
Example arrow hitting ‘right’ move forward sight head ‘right’
After fine tuning the target pin sight head and drilling the X consistently,

Lock down the windage / elevation of the sight head.
Fine tune longer range pins by loosening desired sight pin cap screw.

You will always see a green dot to dot view of the top target pin and rear alignment pin at full draw while holding the longer range pin on target.

Note: for consistent shooting form use bubble level to prevent canting of your bow.

(10 day return policy)

Sight must be returned in original condition.
Do not allow children to play with, sight contains small parts that
Could cause injury or death.

Demo video: www.perrysnopeep.com
Perry 315-245-1538

